# KAW-PWR-UP8

Thank you for purchasing XTC's Power Cable upgrade kit. The kit comes complete with everything needed for installation. The Kit uses the OEM power studs on the winch to power up the busbar in the dash to have full time power. The kit includes power wire with a 60 Amp MIDI Fuse overall circuit protection.

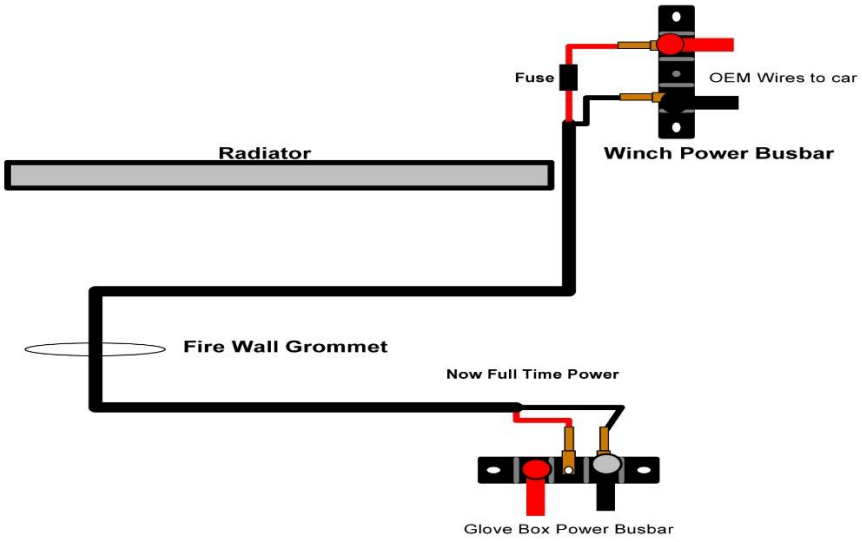


1. Remove Center dash console giving access to inside the dash.





**2. Disconnect the Battery by detaching the Ground Cable.**



3. Attach the evenly cut red and black cables to the OEM busbar under the glove box. The black wire goes to the black post on the right side. Attach the red wire to the center post using the nut that was provided.

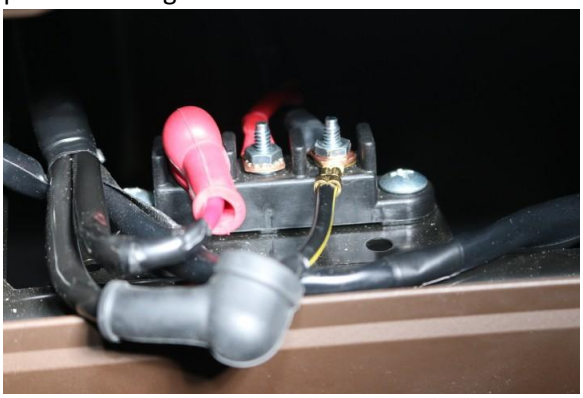

4. Drill out a 1” hole next to the gas/brake assembly and install the 1” grommet.





5. Take the other end of the cable with the longer black wire and push it through the grommet and run over to the right front fender where the Winch Power Busbar is.



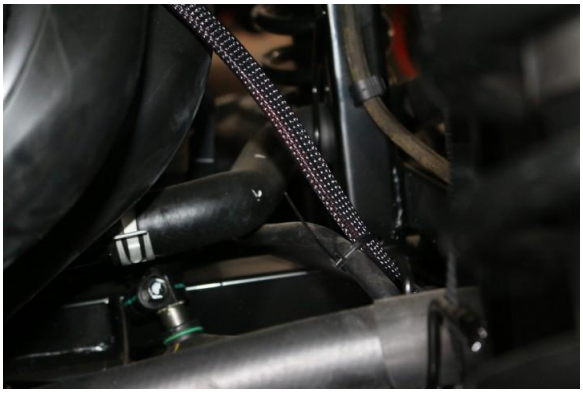

6. Install the fuse on to the red wire and put the cover on it.



7. If your car has a winch then the cable will be attached to the controller, if not it attaches to the busbar. Remove the nut from the top red post and add the new cable with it under the factory cable. Remove the bottom nut and install the black cable with the existing ground cable.





NOTE: When tightening the nut make sure the red cable is pointed up and the black cable is pointed down

8. Use the included cable ties to secure the cable.

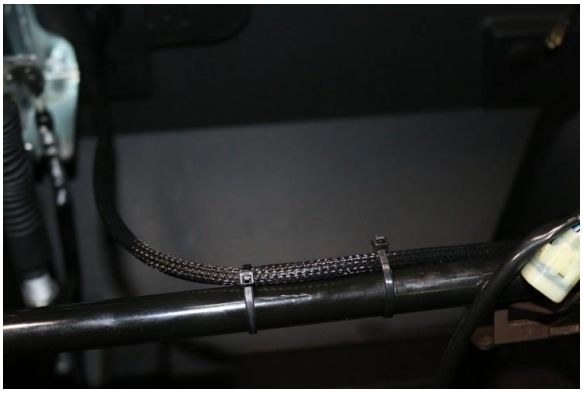

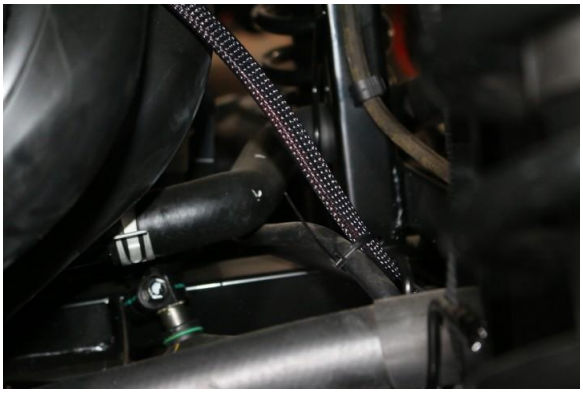

9. Re-Connect the Battery Ground cable.

We can also be reached at Support@xtcpowerproducts.com.
XTC Power Products
A Division of XTC Motorsports LLC
380 E Comstock Dr
Chandler, AZ 85225
480-558-8588
www.xtcpowerproducts.com
**Copyright © 2025 XTC Motorsports LLC, All Rights Reserved. R1**